



PROGRAMMABLE ANALOG ABSOLUTE ENCODER

USER GUIDE







The graph obtained when the product is used with factory settings is as follows. The user can set the measurement start and end points of the device.

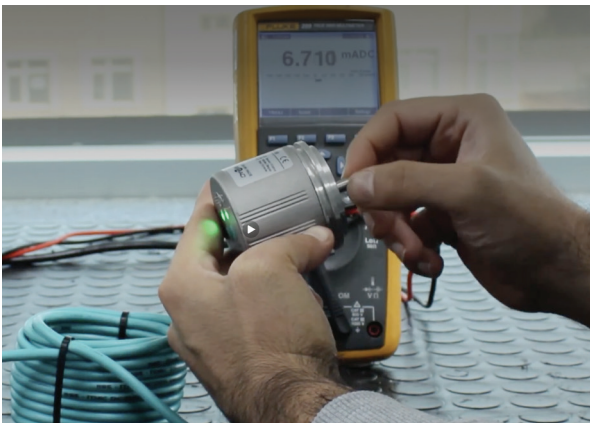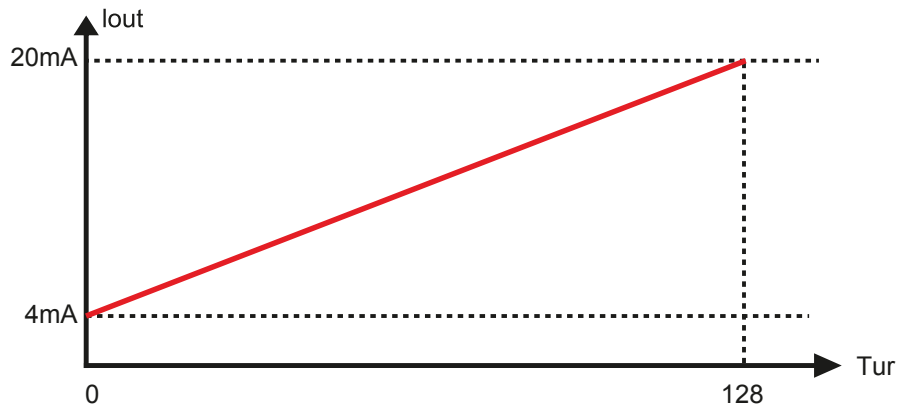

Teaching Procedure

1. To start programming, press and hold buttons A and B simultaneously for 10 seconds. The LEDs will flash.
2. Move the encoder to the desired start point.
3. To set the start point, press and hold button A for 3 seconds.
4. Move the encoder to the desired end point.
5. To set the end point, press and hold button B for 3 seconds.
6. The analog output will be generated between the start point (A) and the end point (B).
7. To reset the factory settings, press and hold buttons A and B simultaneously for 30 seconds.
8. If a negative slope is desired, press button A instead of B in step 3, and button B instead of A in step 5.

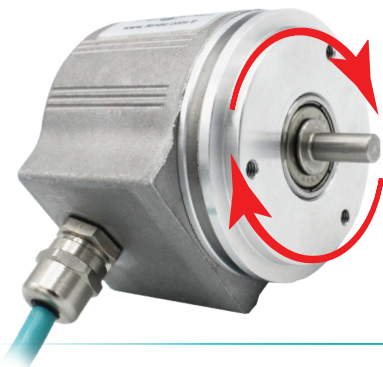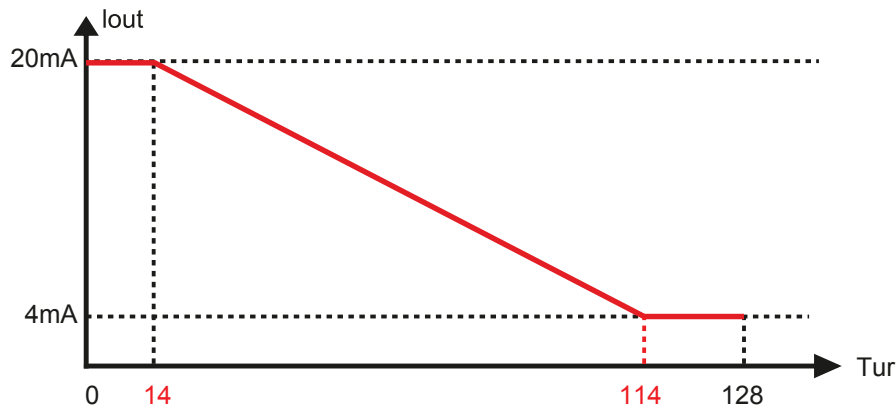

The most important point to consider is that the product must be programmed in a clockwise direction.